



A. Click Setup → Data Source

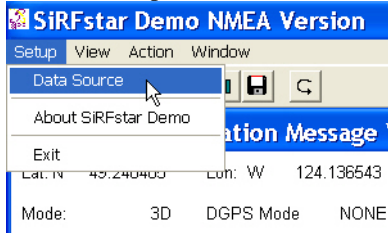

B. Type in COM # which you got from Step 3 in “Serial Port”. Select “Baud Rate” as 4800.

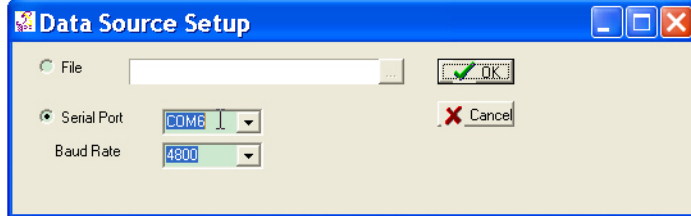

C. Click Action → Start.



D. Check if the program can show some data in its windows. The “measured Navigation message View” window will show your position. And the “Tracking View” will show how many satellites’ signals are received.

